

# Focal Flex® & Contour-All® Installation

Please  
Read And  
Follow All  
Installation  
Instructions  
Carefully

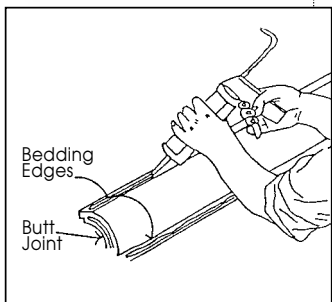


Figure 1

## General

- Unroll moulding, lay flat, and let material reach room temperature of between 55-90°

## 1. Cutting

- Mark projection on the ceiling and depth on the wall.
- Mouldings can be cut, shaped or sanded using common woodworking tools.
- Cut compound miters for all corners.
- Cut butt joints for all straight runs.

## 2. Mounting

- Apply Focal Point AD3 Adhesive #33333 to top and bottom bedding surfaces, corners, and butt joints (*figure 1*). Screw or nail moulding to the wall and ceiling, spacing fasteners 6" apart and 3/8" from edge.
- For large profiles, cut long strips of plywood and fasten to wall just below the depth marks. Rest moulding on plywood edge, fasten with screws or nails. Remove plywood.
- Wet adhesive can be removed with mineral spirits.

## 3. Finishing

- Fill screw or nail holes with vinyl spackle.
- Cover joints with vinyl spackle and lightly sand.
- Clean moulding and apply primer.
- Focal Flex may be stained with a non-penetrating gel stain.
- Use a high-quality latex or oil-based paint.
- Do **NOT** use lacquer paints.

Pour instructions de pose, consultez  
votre distributeur

Voor verwerkingstips, zie uw  
groothandelaar

Für Gebrauchsanweisung, siehe Ihre  
Grosshandler

Consulta con su distribuidor por  
direcciones de instalación



**FOCAL POINT**  
ARCHITECTURAL PRODUCTS  
*"The Difference Is In The Details"*

3006 Anaconda Drive  
Tarboro • North Carolina • 27886  
p 800.662.5550 f 800.352.9049  
www.focalpointap.com

## Important Information

Use only Focal Point Adhesive.

Call your local dealer with any questions.