

Niche Installation

Installation Guide For –

91240 • 91410

91590 • 91630

91770 • 91790

91840 • 91520

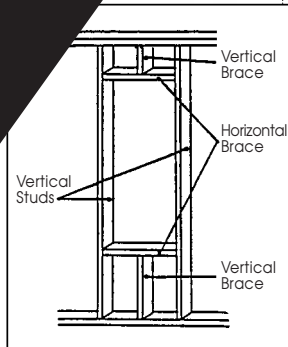


Figure 1

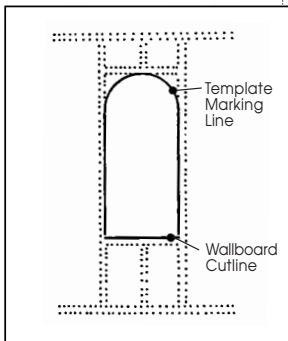


Figure 2

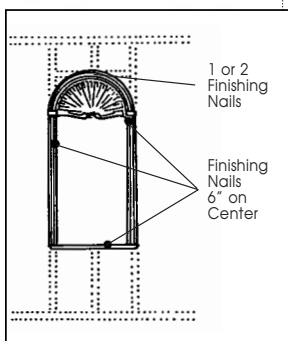


Figure 3

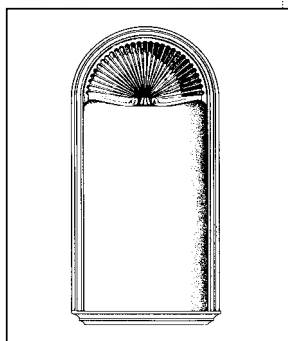


Figure 4

Please
Read And
Follow All
Installation
Instructions
Carefully

General

- We recommend that products be on the job site before installation.
- It is the installer's responsibility to ensure installation conforms to local building codes.

1. Framing

- Niches may require framing out from or into a new or existing wall.
- Refer to rough opening dimensions and install:
(figure 1)
 - vertical studs
 - horizontal braces
 - vertical braces

2. Wall Prep

- Install wallboard.
- Mark locations of studs and braces on wallboard.
- Mark wallboard along line just above bottom horizontal brace between studs.
(figure 2)

3. Cutting Wallboard

- Using face of niche as a template, trace cutline on wall.
- Measure in 3/4" from template line on top and sides.
- Cut through wallboard using inside line as a guide for top and sides. Cut bottom as marked in step 2.
(figure 2)

4. Niche Installation

- Place niche into rough opening, with bottom resting on horizontal brace.
- Check for plumb/level then screw or nail into bracing and studs.
(figure 3)


5. Shelf Installation

- Apply adhesive to back of shelf bracket.
- Position shelf bracket level with bottom of niche.
(figure 4)
- Center under niche, check level and toenail or screw into horizontal brace.


6. Finishing

- Countersink all nails and screws then spackle.
- Caulk between elements and wall.
- Spackle and/or Bondo between shelf bracket and niche.
- Sand and reprime if needed.
- Paint with high quality latex or oil-based paint.
- **Do Not** use lacquer-based paints.


Instructions continued on back

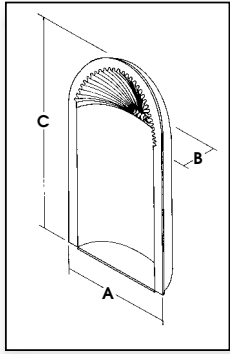


Overall

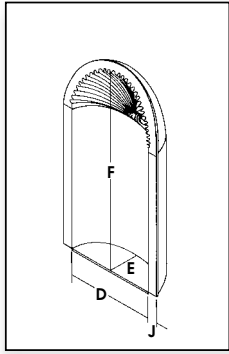

Inside

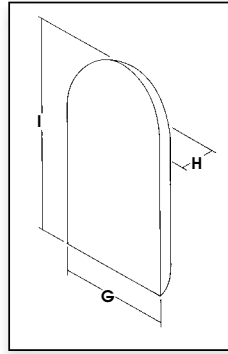

Rough Opening

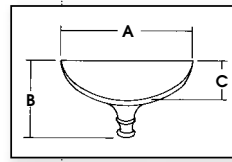

Shelf Bracket

Niche Unit Sets		91240 Chatham	91630 Waverly	91770 Waverly	91790 Wesley	91410 Bellemeade	91590 Sonoma	91840 Sonoma	91520 Monterey	
Niche Unit	Overall	Width A	29-3/4"	22-3/4"	16-3/4"	16-3/4"	15-5/8"	16-7/8"	29-3/4"	16-7/8"
		Depth B	10"	7-5/8"	4"	4"	6-3/4"	5"	8-1/4"	5"
		Height C	57-1/8"	43-3/8"	36-1/2"	36-1/2"	29-5/8"	36"	56-3/4"	36"
	Inside	Width D	24"	17-3/4"	12-3/4"	12-3/4"	10-1/2"	13"	25-1/4"	13"
		Depth E	7-3/4"	6-5/16"	3-1/2"	3-1/2"	5"	3-1/2"	7-5/8"	3-1/2"
		Height F	53-5/8"	39-13/16"	34-1/4"	34-1/4"	25-13/16"	33-5/16"	53-3/4"	33-5/16"
	Rough Opening	Width G	28"	21-3/8"	14-1/2"	14-1/2"	12-1/2"	14-1/2"	28"	14-1/2"
		Depth H	9-1/4"	7-1/4"	4"	4"	6"	4"	9-1/4"	4"
		Height I	56"	42-1/2"	35-1/2"	35-1/2"	28-1/4"	35"	56"	35"
Integral Casing/Pilaster	Width J	2"	2-3/8"	1-7/8"	1-7/8"	2-5/16"	1-3/4"	2"	1-3/4"	
	Proj K	7/8"	9/16"	5/8"	5/8"	13/16"	1"	1-1/4"	1"	
Shelf Bracket	Overall	Width A	3-15/16"	25-9/16"	18-1/4"	17-1/4"	16-5/8"	17-1/4"	3-15/16"	3-15/16"
		Height B	3-1/8"	8-7/8"	6-1/4"	3-1/8"	6"	3-1/8"	3-1/8"	3-1/8"
		Proj C	3-1/8"	7-1/2"	5-1/4"	3-1/8"	6-1/8"	3-1/8"	3-1/8"	3-1/8"

Note: Call your local dealer with any questions.

Pour instructions de pose, consultez votre distributeur

Voor verwerkingstips, zie uw groothandelaar

Für Gebrauchsanweisung, siehe Ihre Grosshandler

Consulta con su distribuidor por direcciones de instalación



FOCAL POINT
ARCHITECTURAL PRODUCTS®
"The Difference Is In The Details"

3006 Anaconda Drive
Tarboro • North Carolina • 27886
p 800.662.5550 f 800.352.9049
www.focalpointap.com